



www.audio-service.com

AUDIO-SERVICE D.A.I.S. INFO

D.A.I.S. MADI Quickstart

1) Power ON

First Step is to connect D.A.I.S. with the COM-Port of your PC.
Turn on the analogue power supply APWS first (when existing), then the D.A.I.S.-System and at last the PC .

2) Software

- Install the software from Disk 1/1 first and after it the UpdateDisk 1/2.
- Copy file *D.A.I.S.* into '*DAIS 1.0*'-directory.
- On the question "replace?" confirm with **YES** or **OK**.
- Start the D.A.I.S. software and continue with the configuration.

3) D.A.I.S. Sync and device

In the **Optionmenu** choose **SETTINGS** and then the COM-Port (COM2 is default).

Synchronisation master: internally on 44.1 kHz, 48 kHz,
slave: BNC, or on MADI (choose *EXT02R*).

- choose *Device 1* = default
- click *AutoSet* (recognition of the cards)
- click *OK*
- store as: Name.mtx

Don't forget: Turn on the the analogue power supply APWS first and then D.A.I.S.-MADI. The optional analogue power supply is only for the analogue interfaces!!!

4) Quick-Start

a) D.A.I.S. was delivered with interface-cards from audio-service:

- Install the software first (mentioned above).
- Start the D.A.I.S. software and open the matrix-file on the UpdateDisc 1/2, it was already configured for you.
- Store the file with an individual name.

b) D.A.I.S. was delivered without interface-cards from audio-service:

- If the D.A.I.S.-System was delivered without interfaces from Audio-Service, the interfaces must be installed first, then proceed with 1,2,3 (see above).



www.audio-service.com

AUDIO-SERVICE D.A.I.S. INFO

D.A.I.S. MADI Quickstart

5) Further Slot-Settings

- a) **MADI32:**
- | | | | |
|-----------------|-------|----------------------|-----------------------------|
| Slot 14 for Ch. | 1-8 | as AES EBU | recognized by the software. |
| Slot 15 for Ch. | 9-16 | as DSP Intern | select. *) |
| Slot 16 for Ch. | 17-24 | as DSP Intern | select. *) |
| Slot 17 for Ch. | 25-32 | as EXT 02R | select. *) |
- *) Manual configuration procedure in the settings menu. See part c)

- b) **MADI64:**
- | | | | |
|-----------------|-------|----------------------|-----------------------------|
| Slot 13 for Ch. | 1-8 | as AES EBU | recognized by the software. |
| Slot 14 for Ch. | 9-16 | as AES EBU | recognized by the software. |
| Slot 15 for Ch. | 17-24 | as DSP Intern | select. *) |
| Slot 16 for Ch. | 25-32 | as DSP Intern | select. *) |
| Slot 17 for Ch. | 33-40 | as EXT 02R | select. *) |
| Slot 18 for Ch. | 41-48 | as EXT 02R | select. *) |
| Slot 19 for Ch. | 49-56 | as EXT 02R | select. *) |
| Slot 20 for Ch. | 57-64 | as EXT 02R | select. *) |
- *) Manual configuration procedure in the settings menu. See part c)

c) Manual configuration procedure in the settings-menu :

OPTIONS-menu > SETTINGS

- | | |
|-------------------------------------|--------------------------------|
| on Slot 15 choose DSP Intern | and press Set |
| on Slot 16 choose DSP Intern | and press Set |
| on Slot 17 choose EXT 02R | and press Set |
| on Slot 18 choose EXT 02R | and press Set |
| on Slot 19 choose EXT 02R | and press Set |
| on Slot 20 choose EXT 02R , | press Set and OK |

Don't forget: Turn on the the analogue power supply **APWS** first and then **D.A.I.S.-MADI**. The optional-analogue power supply is only for the analogue interfaces!!!