



www.audio-service.com

AUDIO-SERVICE D.A.I.S. INFO

D.A.I.S. PLUS Quickstart

1) Power ON

First Step is to connect D.A.I.S. PLUS with the COM-Port of your PC.
Turn on the analogue power supply APWS first (when existing), then the D.A.I.S.-System and at last the PC .

2) Software

- Install the software from Disk 1/1 first and after it the UpdateDisk 1/2.
- Copy file *D.A.I.S.* into '*DAIS 1.0*'-directory.
- On the question "replace?" confirm with **YES** or **OK**.

Technical info:

D.A.I.S. PLUS contains 2 controllers and requires 2 matrix-files consequently, matrix A or & Matrix B or 2.

Matrix A or 1 for the lower D.A.I.S. and matrix B or 2 for the upper D.A.I.S.-System. Matrix A or 1 is the work-matrix (main-matrix).

Matrix B or 2 only reads the interfaces from the slots 15 to 20 and you only need this matrix, if you install another interface above in one of these slots.

- Start the D.A.I.S. software and continue with the configuration.

3) D.A.I.S. PLUS Sync and device

In the **OPTIONS**-menu choose **SETTINGS** and then the COM-Port (**Matrix A and B must have the same COM-Port Settings!!!**).

a) Matrix A or 1:

Synchronisation master: intern on 44.1 kHz, 48 kHz,
 slave: BNC

- choose *Device 1* = default
- click *AutoSet* (recognition of the cards)
- click *OK*
- store as: Name + A or 1.mtx

b) Matrix B or 2:

- store as: Name + A or 1.mtx
- In the **WINDOWS**-menu choose **CASCADE**
- In the **FILE**-Menu creat a document.
- In the **OPTIONS**-Menu choose **SETTINGS**
- Choose *Device 2*
- Put Synchronization on EXT 02R
- Click *AutoSet*
- Click *OK*
- Store as: name + B or 2



www.audio-service.com

AUDIO-SERVICE D.A.I.S. INFO

D.A.I.S. PLUS Quickstart

4) Quick-Start

a) D.A.I.S. was delivered with interface-cards from audio-service:

- Install the software first (mentioned above).
- Start the D.A.I.S. software and open the matrix-file A or 1 on the UpdateDisc 1/2, it was already configured for you.
- Store the file with an individual name.

b) D.A.I.S. was delivered without interface-cards from audio-service:

- If the D.A.I.S.-System was delivered without interfaces from Audio-Service, the interfaces must be installed first, then proceed with 1,2,3 (see above).

5) Further Slot-Settings

Go on matrix B or 2 and look which slots are busy.

For the slots 1 to 6 from matrix B, must on matrix A the following information be heeded:

Slot 1 of matrix B or 2 corresponds to [slots 15](#) in the matrix A or 1
Slot 2 of matrix B or 2 corresponds to [slots 16](#) in the matrix A or 1
Slot 3 of matrix B or 2 corresponds to [slots 17](#) in the matrix A or 1
Slot 4 of matrix B or 2 corresponds to [slots 18](#) in the matrix A or 1
Slot 5 of matrix B or 2 corresponds to [slots 19](#) in the matrix A or 1
Slot 6 of matrix B or 2 corresponds to [slots 20](#) in the matrix A or 1

>>> In the matrix A or 1 go to the **OPTIONS**-menu and choose **SETTINGS**,

go to slot 15, select [DSP Intern](#) and click on [Set](#),
go to slot 16, select [DSP Intern](#) and click on [Set](#),
go to slot 17, select [EXT 02R](#) and click on [Set](#),
go to slot 18, select [EXT 02R](#) and click on [Set](#),
go to slot 19, select [EXT 02R](#) and click on [Set](#),
go to slot 20, select [EXT 02R](#), click on [Set](#) and than on [Ok](#).

Don't forget: Turn on the the analogue power supply APWS first and then the D.A.I.S.-System. The optional-analogue power supply is only for the analogue interfaces!!!